



® RadioShack

RC Zoo Mobile

60-2795

Step One

Installing Batteries

You will need...

Four AA batteries for the car

One 9V battery for the transmitter

Put AA Batteries in the Car

- Slide the **LOW/OFF/HIGH** switch on the back of the Zoo Mobile to **OFF**.
- Loosen the screw on the battery compartment with a Phillips screwdriver and lift the cover to remove it.
- Insert four AA batteries and match the + and - signs with the product.
- Replace battery cover and secure with screw.



Put 9V Battery in Transmitter

- Loosen the screw on the battery compartment cover with a Phillips screwdriver and slide the cover off to remove it.
- Insert one 9V battery and match the + and - signs with the product.
- Replace battery cover and secure with screw.




What's Included

Zoo Mobile

Transmitter

Owner's Manual

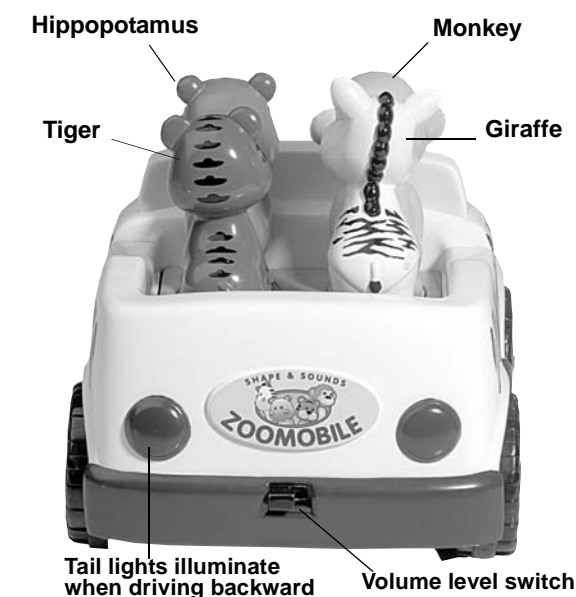


Step Two

Driving the Zoo Mobile

- Slide the **LOW/OFF/HIGH** switch on the back of the Zoo Mobile to **LOW** or **HIGH** to select the volume level.
- Insert each of the four animals into the Zoo Mobile's slots, matching the shapes and colors on the bottom of each one. Each animal makes a corresponding sound.
- Press the upright arrow on your transmitter to drive forward.
- Press the circle arrow to drive the Zoo Mobile backward and in a circle with the backlights on.
- Release the buttons to stop the Zoo Mobile.

When the Zoo Mobile is on the move, the animals move up and down.

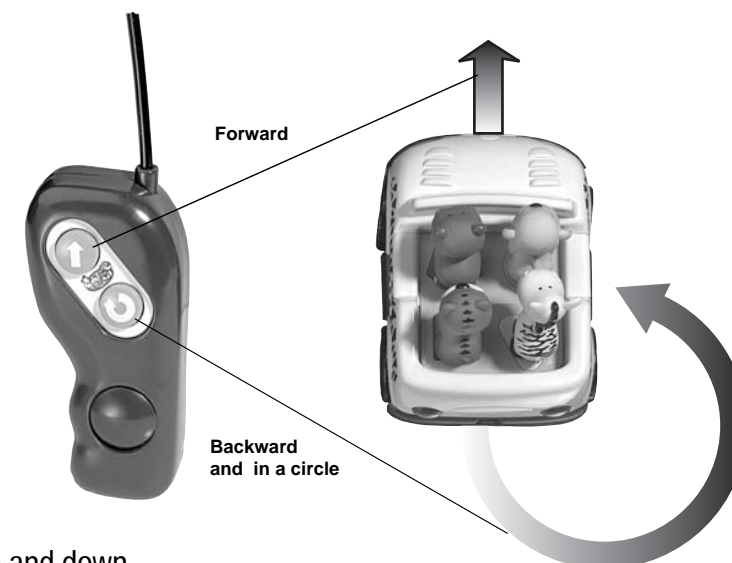

Helpful Hints

- Running your Zoo Mobile for long periods of time can generate a high heat level, which results in wear and tear on the motor. When the battery power dies in your Zoo Mobile, let the vehicle cool down for 10 minutes before installing new batteries.
- If the motor runs, but does not respond to the transmitter, move the transmitter closer to the Zoo Mobile and try again.
- If someone is using a CB nearby, this may cause interference. Move your Zoo Mobile away from the CB.
- You cannot operate your Zoo Mobile near devices with transmitters that use the same frequency (27 MHz).

The FCC Wants You to Know

Your Zoo Mobile might cause TV or radio interference even when it is operating properly. To determine whether your Zoo Mobile is causing the interference, turn off your Zoo Mobile. If the interference goes away, your Zoo Mobile is causing it. Try to eliminate the interference by:

- moving your Zoo Mobile away from the receiver
- contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your Zoo Mobile.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications to this product not expressly approved by RadioShack, or operation of this product in any way other than as detailed by the Owner's Manual, could void your authority to operate the product.

FCC Declaration of Conformity

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Product:	RC Zoo Mobile
Model:	60-2795
Responsible Party:	RadioShack 100 Throckmorton Fort Worth, TX 76102
Phone:	817-415-4300

Safe Care and Use

- The Zoo Mobile is not suitable for children under three years of age.
- Never play with the Zoo Mobile in the street.
- Remember to turn the Zoo Mobile's **ON/OFF** switch to **OFF** when you finish playing with it. This provides longer battery life.
- Clean the Zoo Mobile and transmitter with a dry cloth. Do not immerse them in water.
- Modifying or tampering with the Zoo Mobile's internal components can cause a malfunction and invalidate its warranty, as well as void your FCC authorization to use it. If your Zoo Mobile is not performing as it should, take it to your local RadioShack store for assistance.
- Keep this owner's manual for future use.

Battery Notes

- Any batteries purchased for use in this toy may pose a hazard to children. Please check the safety notice supplied with the batteries before use.
- If your Zoo Mobile moves slowly, or not at all, replace the batteries with alkaline batteries from RadioShack.
- If the Zoo Mobile moves slowly after installing fresh batteries, check the wheels for lint, thread, hair, and/or dust.
- When the transmitter's range decreases, replace your batteries.
- Never leave dead or weak batteries in the Zoo Mobile or transmitter.
- Use fresh batteries of the required size and recommended type only.
- Do not mix old and new batteries.
- Never mix alkaline batteries with other types of batteries.
- If you do not plan to use the Zoo Mobile for several days, remove all batteries from the transmitter and the Zoo Mobile. Batteries can leak chemicals that may destroy electronic parts.
- Dispose of old batteries promptly and properly. Do not burn or bury them.

Specifications

BatteriesCar - 4 AA Batteries (not included)
Transmitter - One 9V Battery (not included)
Battery Life20 Minutes
Frequency 27 MHz
Control Distance 60 Ft.
Speed 160 Ft./Min.
Recommended Age..... 3 and up

Specifications are subject to change and improvement without notice. Individual units may vary.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

©2003. RadioShack Corporation.
All Rights Reserved.
RadioShack and RadioShack.com are trademarks
used by RadioShack Corporation.

60-2795
Printed in China
05A03